



- Montageanleitung -

**Frontgrill
— 3er —
(inkl. M-Technik)**



Teile-Nr.: 5111 230 120-320
(english version see page 6)

Allgemeine Hinweise!



AC Schnitzer Frontgrill - 3er - inkl. M-Technik

Wichtige Hinweise!

Diese Montageanleitung ist unbedingt vor Beginn der Einbaurbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen!

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge, bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montagehinweisen vorzugehen.

Als Hersteller sind wir verpflichtet darauf hinzuweisen, dass jegliche Veränderungen, die Sie am für den öffentlichen Verkehr zugelassenen Fahrzeug vornehmen, der Abnahme durch eine Prüfstelle und Eintragung in die Fahrzeugpapiere bedarf!

Da die gesetzlichen Bestimmungen von Land zu Land variieren können, bitten wir Sie sich bei den zuständigen Behörden zu erkundigen.

Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

Der AC Schnitzer Frontgrill kann NICHT in Verbindung mit... verbaut werden!

... Aktiver Geschwindigkeitsregelung (ACC)

Verwendungsbereich

AC Schnitzer Frontgrill 5111 230 120 für Fahrzeuge ohne M-Technik

AC Schnitzer Frontgrill 5111 230 320 für Fahrzeuge mit M-Technik

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit mit **Kunststoffkabelbinder** beträgt ca. **6 AW**.

Die Einbauzeit mit **Edelstahlkabelbinder** beträgt ca. **17 AW**. (inkl. Frontschürze Aus.- und Einbau)

Die Einbauzeit kann je nach Zustand und Ausstattung des Fahrzeugs abweichen.

Erforderliches Werkzeug

Klebeband

Zange

Inhaltsverzeichnis



AC Schnitzer Frontgrill - 3er - inkl. M-Technik

Kapitel	Seite
1. Gelieferte Bauteile	4
2. Montage des AC Schnitzer Frontgrill	5

Gelieferte Bauteile



AC Schnitzer Frontgrill - 3er - inkl. M-Technik

A1



1x

A2




1x

B



2x

C

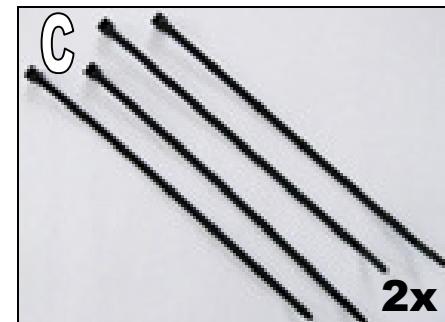

2x

D



1x

SCHNITZER

SCHNITZER

1x

E

Gutachterliche
Stellungnahme

*drafting of an
expert's report*

1x

A1 Frontgrill F30 – F31 **nicht für** M-Technik 5111 230 120

A2 Frontgrill F30 – F31 **für** M-Technik 5111 230 320

B Edelstahlkabelbinder 4,6 x 201mm

C Kunststoff Kabelbinder 3,5 x 200mm

D AC Schnitzer Vitro Aufkleber – schwarz / silber –

E Gutachterliche Stellungnahme

Montageanleitung



AC Schnitzer Frontgrill - 3er - inkl. M-Technik

2. Montage AC Schnitzer Frontgrill

Hinweis!

AC Schnitzer Frontgrill mit den mitgelieferten Kabelbinder montieren. Auf Festsitz des Frontgrill ist zu achten!

Bei Montage der Edelstahl Kabelbinder ist die Frontschürze zu demontieren, damit der Verschluß der Edelstahlkabelbinder hinter dem unteren Ziergitter, außerhalb des Sichtbereichs liegt.



Hinweis!

Um Kratzer und Schäden während der Montage zu vermeiden, Lufteinlassöffnung der Stoßstangenverkleidung und Arbeitsbereiche zur späteren Frontgrillbefestigung mit Klebeband o.ä. abkleben.



Abb. 1

Frontgrill (1) vorsichtig in die Lufteinlassöffnung der Stoßstangenverkleidung einsetzen und mittig ausrichten.

Abb. 2

AC Schnitzer Frontgrill von hinten an den 2 Befestigungslaschen mit den mitgelieferten Edelstahl Kabelbinder (1) am serienmäßigen Frontgrill (2) befestigen. Es ist darauf zu achten, daß der Verschluß hinter dem Ziergitter liegt!



Kunststoff Kabelbinder können von vorne befestigt werden. Bei beiden Varianten, ist überstehendes Material der Kabelbinder abzutrennen.

Auf festen Sitz des Frontgrills ist zu achten!

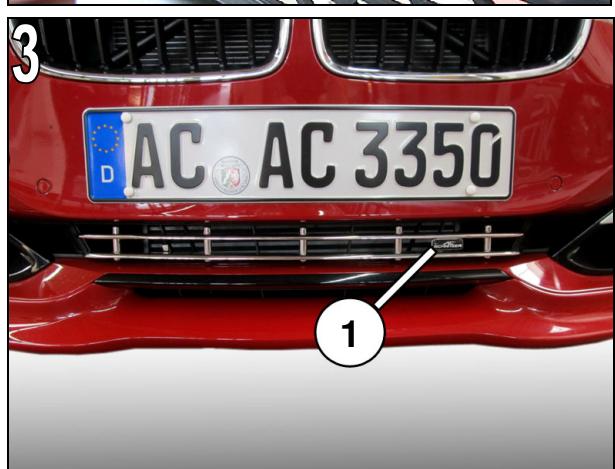


Abb. 3

Mitgelieferten Vitro Aufkleber (1) auf die dafür vorgesehene Lasche kleben.

Irrtum und Änderung vorbehalten!



-Fitting Instructions-

Front Grille
– 3 Series –
(inc. M-Technic)



Teile-Nr.: 5111 230 120-320

General Notes!



AC Schnitzer Front Grille – 3 Series – inc. M-Technik

Important Notes!

These Fitting Instructions must be read in full before beginning installation work. AC Schnitzer bears no liability for damage caused by incorrect installation!

These Fitting Instructions are intended solely for use by authorised AC Schnitzer dealers.

These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge.

All diagrams show LHD vehicles, for RHD vehicles proceed accordingly or follow separate Fitting Instructions.

As a manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test centre and registration in the vehicle documents.

As the legal regulations may vary according to location, please contact the competent authorities for information.

Fitting

Carry out all work in accordance with applicable safety regulations.

AC Schnitzer front grille can not be fitted in conjunction with...!

... active cruise control (ACC)

Use area

AC Schnitzer front grille for vehicles without M-Technic 5111 230 120

AC Schnitzer front grille for vehicles with M-Technic 5111 230 320

Fitting Time (1 unit = 5 minutes)

The fitting time with **plastic cable ties** is around **6 units**.

The fitting time with **stainless steel cable ties** is around **17 units**, (inc. front skirt remove and install).

The which may vary depending on vehicle condition equipment level.

Tools Required

Masking tape

Pliers

Contents



AC Schnitzer Front Grille – 3 Series – inc. M-Technik


Kapitel	Seite
1. Components supplied	4
2. Fitting the AC Schnitzer front grille	5

Components Supplied



AC Schnitzer Front Grille – 3 Series – inc. M-Technik

A1

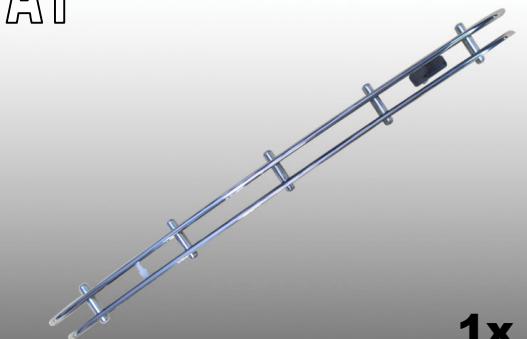

1x

A2




1x

B



2x

C

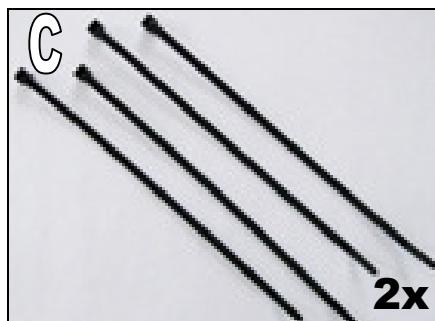

2x

D



1x
SCHNITZER

1x
SCHNITZER

E

Gutachterliche
Stellungnahme

*drafting of an
expert's report*

1x

A1 Front grille F30-F31 **not for** M-Technic 5111 230 120

A2 Front grille F30-F31 **for** M-Technik 5111 230 320

B stainless steel – cable ties 4,6 x 201mm

C plastic cable ties 3,5 x 200mm

D AC Schnitzer sticker – black / silver –

E drafting of an expert's report

Fitting Instructions



AC Schnitzer Front Grille – 3 Series – inc. M-Technik

2. Fitting the AC Schnitzer Front Grille

Note!

AC Schnitzer front grille with the supplied cable ties mount. For tightness of Frongrill is important!

With mounting the stainless steel cable ties is the front skirt to be dismantled, so that the closure of the stainless steel cable ties positioned behind the standard front grille.

Note!

To avoid scratches and damage during fitting, mask off contact surfaces and fitting area for fixing points of the front spoiler and front grille with masking tape or similar.

Fig. 1

Carefully insert front grille (1) in the opening in the front skirt, and align centrally.



Fig. 2

From behind, attach AC Schnitzer front grille to the standard front grille (2) at the 2 fixing tabs using the stainless steel cable ties (1) supplied. Ensure that the closures of the stainless steel cable ties are positioned on the inside after fastening!

Plastic cable ties can be mounted from the front. All variations cut off surplus material from the cable ties.

Ensure an absolutely firm seat of the front grille!



Fig. 3

Apply the AC Schnitzer sticker supplied (1) on the tab provided.



Subject to errors and modifications!