

# Intake Kit Installation Instructions: 2003-2005 BMW Z4 L6 2.5L / 3.0L



P.O. Box 1719  
 Corona, CA 92878  
 Support: 954-493-7100  
 www.afefilters.com

Kit Part #	54-10651 / 54-10661
Make:	BMW
Model:	Z4 (E85)
Engine:	L6 2.5L / 3.0L
Year:	2003-2005


Tools Required	5/16" nut driver or slotted screwdriver
	10mm socket or wrench
	Ratchet and extension

Part List:	1 Air filter (replacement # 24-55505)
	1 Intake housing
	1 Housing Cover
	1 Air Filter Adapter
	8 M6 x 1 x 10 Button Head Screws
	2 Spring clips





Step 1

Complete kit

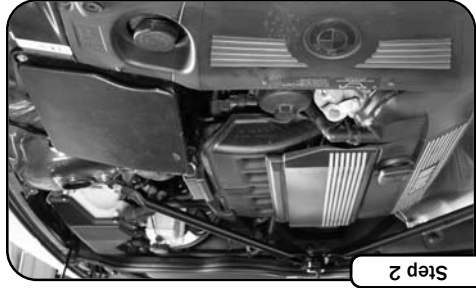

Step 2

Complete stock intake.

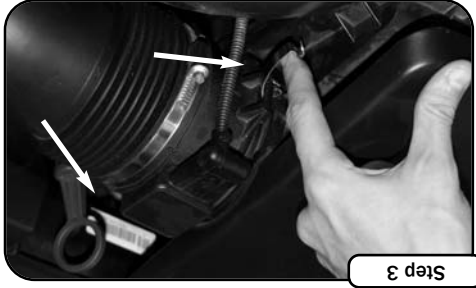

Step 3

Disconnect negative terminal from battery. Loosen the hose clamp on the intake tube. Disconnect the two metal clips on the side of the MAF sensor.



Step 4

Remove the two 10mm bolts on the side of the airbox. Set the two bolts to the side you will be re-installing these later.



Step 5

Remove MAF sensor from airbox. Make sure you do not damage the rubber gasket. Lift airbox out and remove from vehicle.



Step 6

Install the two spring clips to the MAF sensor.



Step 7

Insert the air filter adapter into the housing. Line up the four mounting holes and fasten with the supplied button head screws.




Step 8

Carefully place the rubber MAF sensor gasket into the slot inside the air filter adapter.



Step 9

Lower housing into the engine bay. Fasten the MAF sensor to the housing and secure with the two spring clips.

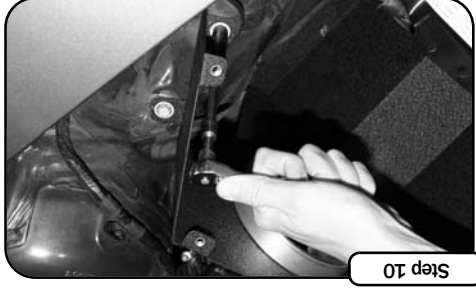


Step 10

Re-install the two screws removed in step 4. Tighten down assembly.



Step 11

Install and tighten your pre-oiled filter. Do not use any grease or oil.

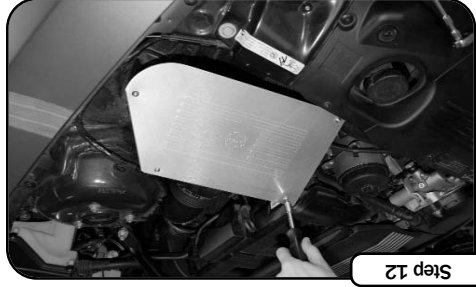

Step 12

Place aluminum cover over housing. Secure with the four remaining button head screws.



Step 13

Your installation is now complete. Tighten all connections and clamps. Re-check after a few hours.

Note: Filter Cleaning and Re-oiling: When cleaning your afe filter, be sure to use only afe's "Restore Kit" (afe P/N: 90-50001 blue oil aerosol, or afe P/N: 90-50501 blue squeeze bottle oil or afe P/N: 90-50000 gold oil aerosol, or afe P/N: 90-50500 gold squeeze oil).  
 Filter Replacement: Magnum FLOW PN: 24-55505 (black w/blue media).